

Remote Programming Instructions (TV – ADB Remote)

1. Turn the TV on.
2. Press white **TV Button** (top left hand side).
3. Press and hold **RCU SETUP Button** until the **TV Button** blinks red two times.
4. Enter the CODE_____. If the code was accepted the **TV Button** will blink twice.
5. Verify you have entered the correct code by testing the **POWER Button**, the **Volume UP** and **DOWN Buttons**, the **MUTE Button**, and the **INPUT Button**. If all of those are not working it is NOT the correct code, you will need to repeat steps 1-4 with the next code.
6. After the correct code is found and working your TV functions, remember to press the **STB Button** (top right hand side) to work your SET TOP BOX.

Most Common Television Codes

Dell –

1080, 1178, 1264, 1403

Emerson –

0154, 0236, 0463, 0180, 0178,
0171, 1963, 1944, 0623, 0282,
0280, 0270, 0185, 0183, 0182,
0181, 0179, 0177, 0158, 0039,
0038, 0019

Hitachi –

1145, 0145, 0016, 0032, 0038,
0056, 0095, 0097, 0151, 0173,
0227, 0279, 0409, 0413, 0797,
1960

HP –

1088, 1089, 1101, 1494, 1502

iLo –

1286, 1603, 1990

JVC –

0053, 0036, 0069, 0160, 0169,
0182, 0731, 1253

LG –

1256, 0178, 0442, 0700, 0829,
0856, 1178, 1325, 1423, 1758,
1993

Magnavox –

1454, 0054, 0030, 0706, 1963,
1944, 1525, 1254, 1198, 0802,
0386, 0230, 0187, 0186, 0179,
0096, 0036, 0028, 0024, 0020

Mitsubishi –

0093, 1250, 0150, 0178, 0014,
0019, 0098, 0155, 0331, 0358,
0836, 0868, 1550

Optimus –

0154, 0250, 0166, 0650

Panasonic –

0250, 0051, 0055, 0162, 0226,
0338, 0375, 0650, 1291, 1410,
1941, 1946, 1947

Phillips –

1454, 0054, 0690, 1154, 1483

Polaroid –

0765, 0865, 1262, 1276, 1314,
1316, 1326, 1327, 1328, 1341,
1498, 1523, 1991, 1992

RCA –

1447, 0047, 2002, 1958, 1953,
1948, 1547, 1347, 1247, 1147,
1047, 0747, 0679, 0278, 0174,
0135, 0090, 0038, 0029, 0019,
0018

Samsung –

0060, 0812, 0702, 0178, 0030,
1903, 1575, 1395, 1312, 1060,
0814, 0766, 0427, 0408, 0329,
0056, 0032, 0019

Sanyo –

0154, 0088, 0107, 0146, 0159,
0232, 0484, 0799, 0893, 1142

Sceptre –

0878, 1217, 1360, 1599

Sharp –

0093, 0039, 0153, 0157, 0165,
0220, 0281, 0386, 0398, 0491,
0688, 0689, 0818, 0851, 1602

Sony –

1100, 0000, 0011, 0080, 0111,
0273, 0353, 0810, 0834, 1317

Sylvania –

0054, 0030, 0171, 0020, 0028,
0065, 0096, 0381, 1271, 1944,
1963

Toshiba –

0154, 1256, 0156, 1265, 0060,
1945, 1935, 1704, 1656, 1635,
1356, 1343, 1325, 1306, 1156,
0845, 0832, 0650, 0149, 0036

Vizio –

0864, 0885, 1499, 1756, 1758

Zenith –

0017, 0463, 1265, 0178, 0092,
0016

*(If unable to find correct remote code, please see the reverse side)

Automatic Search Instructions

(Automatic Search should only be undertaken if none of the brand codes works or your brand name is not listed. Use the **Automatic Search** option.)

1. Turn the TV on.
2. Press white **TV Button** (top left hand side).
3. Press and hold **RCU SETUP Button** until the **TV Button** blinks red two times.
4. Enter code **9 9 1** on the keypad of the remote. The **TV Button** will blink red twice.
5. Aim the remote at the TV and press the **POWER Button**.
6. Press the **Channel UP Button** repeatedly at a slow pace (approximately 1 second between presses) until the television switches off.
7. Press the **POWER Button** to turn the TV back on.
8. Next, Press the **RCU Setup Button** to store the code for into your remote. The **TV Button** will blink twice if the code is accepted.
9. Your remote is now programmed to operate your TV set.
10. Remember to press the white **STB Button** (top right hand side) to work your SET TOP BOX.